


YOUR RAYSAFE X2 SYSTEM

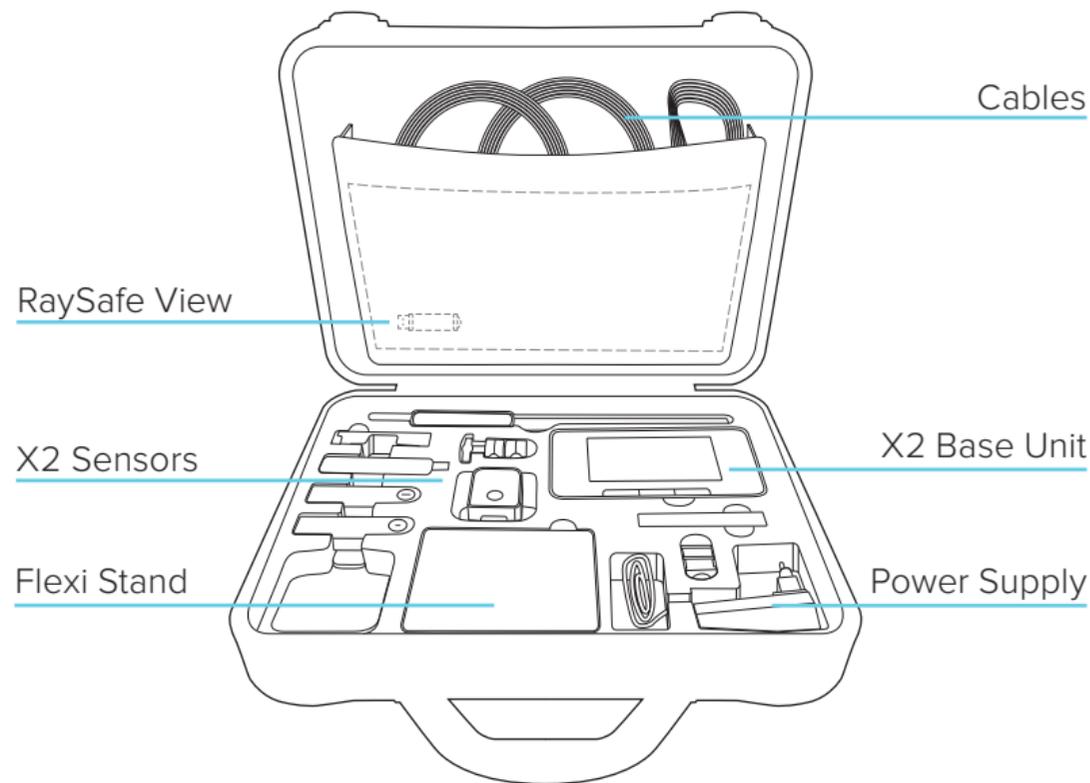

LEARN MORE

BASE UNIT, SENSORS AND ACCESSORIES

Further instructions for use can be found in the base unit. Press the menu button and select Help.

RAYSAFE VIEW

RaySafe View help can be accessed in the program's Help menu.

CALIBRATION DATE

See the calibration label on the sensor, or swipe right from the home screen and press the "i" symbol for the connected sensor to get the calibration date.

MEASUREMENT SPECIFICATIONS

Swipe right when viewing a single parameter to read measurement specifications for that parameter. Visit www.raysafe.com for complete instrument specifications.

TECHNICAL SUPPORT

Don't hesitate to contact our support team if you have any questions. Visit www.raysafe.com for contact information.

QUICK GUIDE


RaySafe X2

© 2020.08 Unfors RaySafe 5000150-3.10




GETTING STARTED


Note! To change the base unit language, swipe right from Home screen, press X2 Base Unit, and select language.

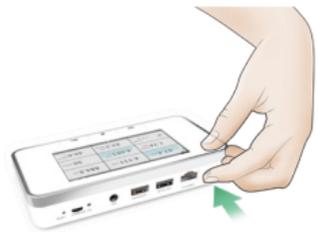

Turn on the base unit

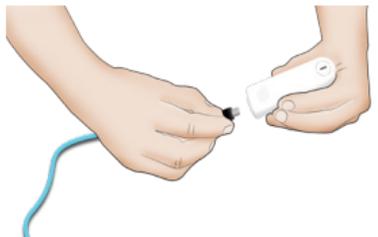

Connect a sensor

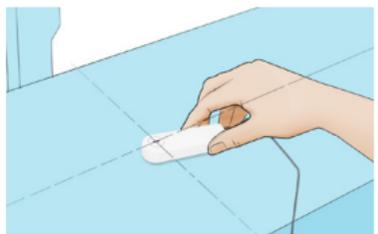

Position and expose

NAVIGATING THE BASE UNIT



Menu Home Back



Power

Press the power button shortly to enter sleep mode. After a while in sleep mode, the base unit will turn off automatically.

Press the button for 2 seconds to turn off the base unit immediately.



Swipe sideways on the screen to access different views.

Swipe up and down to scroll between measurements.



Tap on a parameter to get larger digits. Swipe right to view the parameter information with measurement specifications, and left to view waveform, if available for the current parameter.

RAYSAFE VIEW



Connect to a computer running RaySafe View to:

- control instruments remotely
- view and analyze measurement data and waveforms
- store and backup measurement files
- transfer data to Microsoft Excel or other software