Manual Supplement

Manual Title:	SPOT Light Users	Supplement Issue:	3
Part Number:	4151274	Issue Date:	8/17
Print Date:	February 2012	Page Count:	1
Revision/Date:	1	-	

This supplement contains information necessary to ensure the accuracy of the above manual.



© 2013-2017 Fluke Corporation. All rights reserved.

Manual Supplement

Change #1, 63286, 218

On pages 14, under *Specifications* remove **Battery Charger**, **Safety Standards**, **Certifications** and **Electromagnetic Compatability** and replace with:

Safety	IEC 61010-1: 300 V CAT II, Pollution Degree 2
IP Rating	IEC 60529: IP20
Electromagnetic Environment	IEC 61326-1: Basic
Battery Charger	100 V to 240 V, 50/60 Hz input, 6V/3 A output. For best performance, the battery charger must be connected to a properly grounded ac receptacle.

Change #2, 456, 458

On page 9, add the following to the end of the page:

By default, the unit automatically turns off if inactive for 5 minutes. To change this setting push and hold for 3 seconds when the 'Test' field is highlighted. This shows an auto-off option. Select Y for Yes or N for No.

To restore the display to English, turn off SPOTLight, then push and hold and turn on SPOTLight.

Change #3, 475

On page 5, replace the AC/DC Power Supply with:

AC/DC Power Supply 4766589