



## Place your dosimeter badge properly

It is important to properly wear your i3 Dosimeter to obtain accurate radiation readings. Follow these recommendations on the best way to ensure you're wearing your badge correctly.

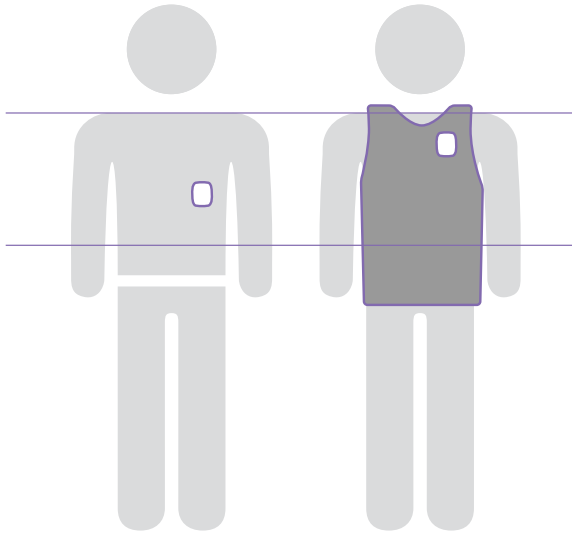

Wear dosimeter between **shoulders** and **waist**  
If using a lead apron wear **outside** apron

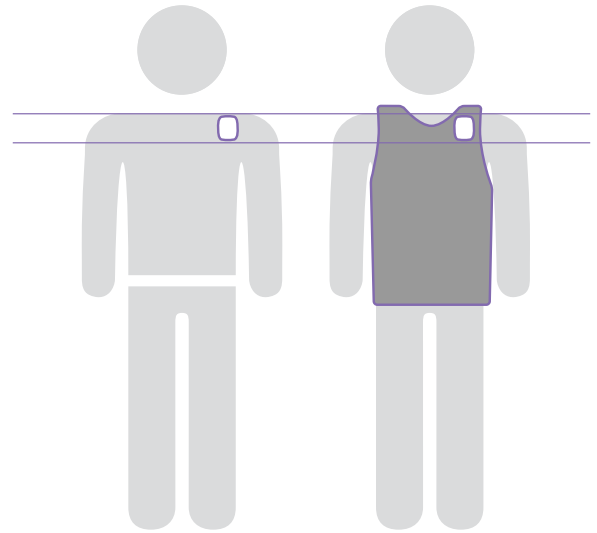

Wear dosimeter on **collar**  
If using a lead apron and/or thyroid collar, wear **outside** protection garments

## RaySafe i3 Real-time Dose Monitoring System

Monitor your X-ray dose exposure instantly.

The RaySafe i3 is an active dosimetry system that provides real-time insights about radiation exposure, helping medical staff and physicians evaluate and directly adjust their behaviors and more effectively use all the radiation reduction solutions provided in the room.

Learn more at: [FlukeBiomedical.com](http://FlukeBiomedical.com)

